


000 (

034)



CHORUS


CH-10

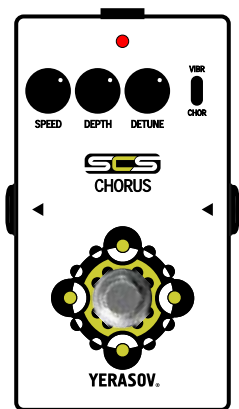

YERASOV.


YERASOV.

- (80%).
 - 2
 - , , , ,
, , , ,
- CHORUS CH-10 -
- SPEED DEPTH " " DETUNE.
VIBR/CHOR
- ALPHA
TRUE BYPASS.

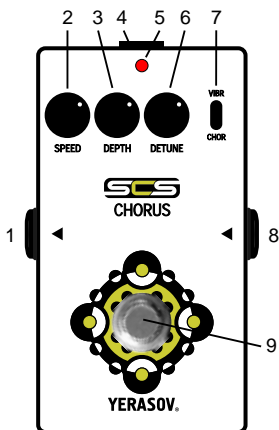

- 1-
- 2- **SPEED -**
- 3- **DEPTH-**
- 4-
- 5-
- 6- **DETUNE -**
- 7- **VIBR/CHOR -**

- 8-
- 9-

DC 9V 


H-10

9 6F-22,
500 YERASOV. AD9-100 AD9-

()

-
-
-
-
-
-

CHOR.

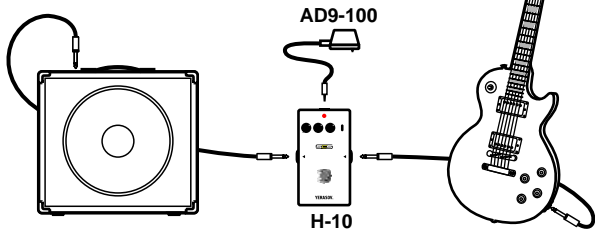

VIBR.

C SCS PEDAL BOARD

SCS Pedal Board.

SCS

Pedal Board

SCS Pedal Board.

www.yerasov.ru.

YERASOV.

,	470
(,),	9
, A,	10
, ,	112 62 50
, ,	0,25

CH-10,	1
,	1
,	1

12

!

- , ;
- , ;
- , ;

CH-10

60065, 22505,
51515, 51317.3.2-2006
(. . 6,7), 51317.3.3,

RU. 02. 05120

YERASOV MUSIC CORPORATION

440003,

/ . (8412) 93-03-56, 93-03-60.

E-mail: sale@yerasov.ru

CH-10

YERASOV MUSIC CORPORATION
440003, / . (8412) 93-03-56, 93-03-60.
WWW.YERASOV.RU

()

, 20.

, 20.

YERASOV MUSIC CORPORATION
www.yerasov.ru e-mail: sale@yerasov.ru